

Go!Control

HOW TO ADJUST BRIGHTNESS & VOLUME

Brightness & Volume

- ▶ To change the brightness or volume, enter the *User Management* section and select the **Brightness** or **Volume** button.

Brightness & Volume

1. To access the *User Menu*, select **Security**, **Menu**, and then **Toolbox**.



Brightness & Volume

2. The panel will ask you to enter your current Master Code.



Brightness & Volume

3. Once you are in the *User Toolbox*, select **brightness** or **volume**. Set the level for the display brightness and set the desired chime and voice volume. When done, press **OK**.
 - This setting does NOT affect the alarm sounder volume.

