

Go!Control

HOW TO ADJUST THE CHIME SETTINGS

Chime Settings

- ▶ Your Go!Control panel has a chime feature to alert you when a door or window has been opened.
- ▶ Each zone on your system can be set to sound a chime and/or a voice descriptor when the zone has been triggered.
- ▶ This is initially set up by the installer during programming, but can be changed by the homeowner from the Chime Setup section of the User Toolbox.

Chime Settings

1. To access Chime Setup select **Security, Menu**, and then **Toolbox**.



Chime Settings

2. The panel will ask you to enter your current Master Code.



Chime Settings

3. Once you're in the *User Toolbox*, select **Chime Setup**.



Chime Settings

4. From here you will be able to scroll through your zone list and can select a zone and change the chime.



Chime Settings

5. After chimes have been created, you will need to enable the chime feature. To do this, press **Security, Menu**, and *check mark* the chime button on the bottom of the touch screen.

