

Go!Control

HOW TO SET THE DATE AND TIME

Date & Time

- ▶ If your system is not setup with a back-end service provider, you will need to manually set your date and time.
- ▶ The Go!Control panel has a built-in clock and calendar. The time and date are displayed on the home screen.
- ▶ The time and date are also used for the system history and event logs that store data on system events.

Date & Time

- ▶ The installer can set the system to automatically adjust for Daylight Savings time if it's observed in your location.
- ▶ If you have a cellular unit installed in your panel, the time and date will be automatically set through the cellular radio.

Date & Time

1. To set the date and time, select **Security**, **Menu**, and then **Toolbox**.



Date & Time

2. The panel will ask you to enter your current Master Code.



Date & Time

3. Once you are in the *User Toolbox*, select **Set Date or Set Time**. Use the up and down arrows to set the current date or time. Press **OK**.
4. A confirmation screen showing the date and time set will be displayed. Press **OK**.

