

SETUP WIZARD – CHANGE DEFAULT PAGE

1. In order to change the default page, go to the Site Map and select "Controller."


The screenshot displays the Linear Site Map interface. The page has a blue header with the 'Site map' title and a search bar. The main content area is white and contains a grid of menu items. A red arrow points from the text in the first list item to the 'Controller' link under the 'Device Setting' category.

Site map

- Dashboard**
 - Dashboard
 - Dashboard Setting
- Administration**
 - Card Holder
 - Card Format
 - Access Level
- Schedule**
 - Schedule
 - Holiday Group
 - Unlock Schedule
- Event Action**
 - Event Action
 - Event Code
- Device Setting**
 - Door
 - Aux Input
 - Aux Output
 - Controller
- User Setting**
 - User Def. Field
 - User Role
 - Web User Account
- System Setting**
 - Update
 - Backup
 - Restore
 - Reboot
 - Factory Default
- Network Setting**
 - IP Address
 - FTP
 - SMTP
 - Time Server
- Floor**
 - Floor Setting
- Data Transfer**
 - User Data Export
 - User Data Import
- Log**
 - Log
 - Log Report
 - Log Management
- Report**
 - Report
 - Access Report
 - System Report
- Group Table**
 - Card Holder Group
 - Door Group
 - Access Level Group
- Client & Site**
 - Site Management

SETUP WIZARD – CHANGE DEFAULT PAGE

1. In order to change the default page, go to the Site Map and select "Controller."
2. Select the controller.

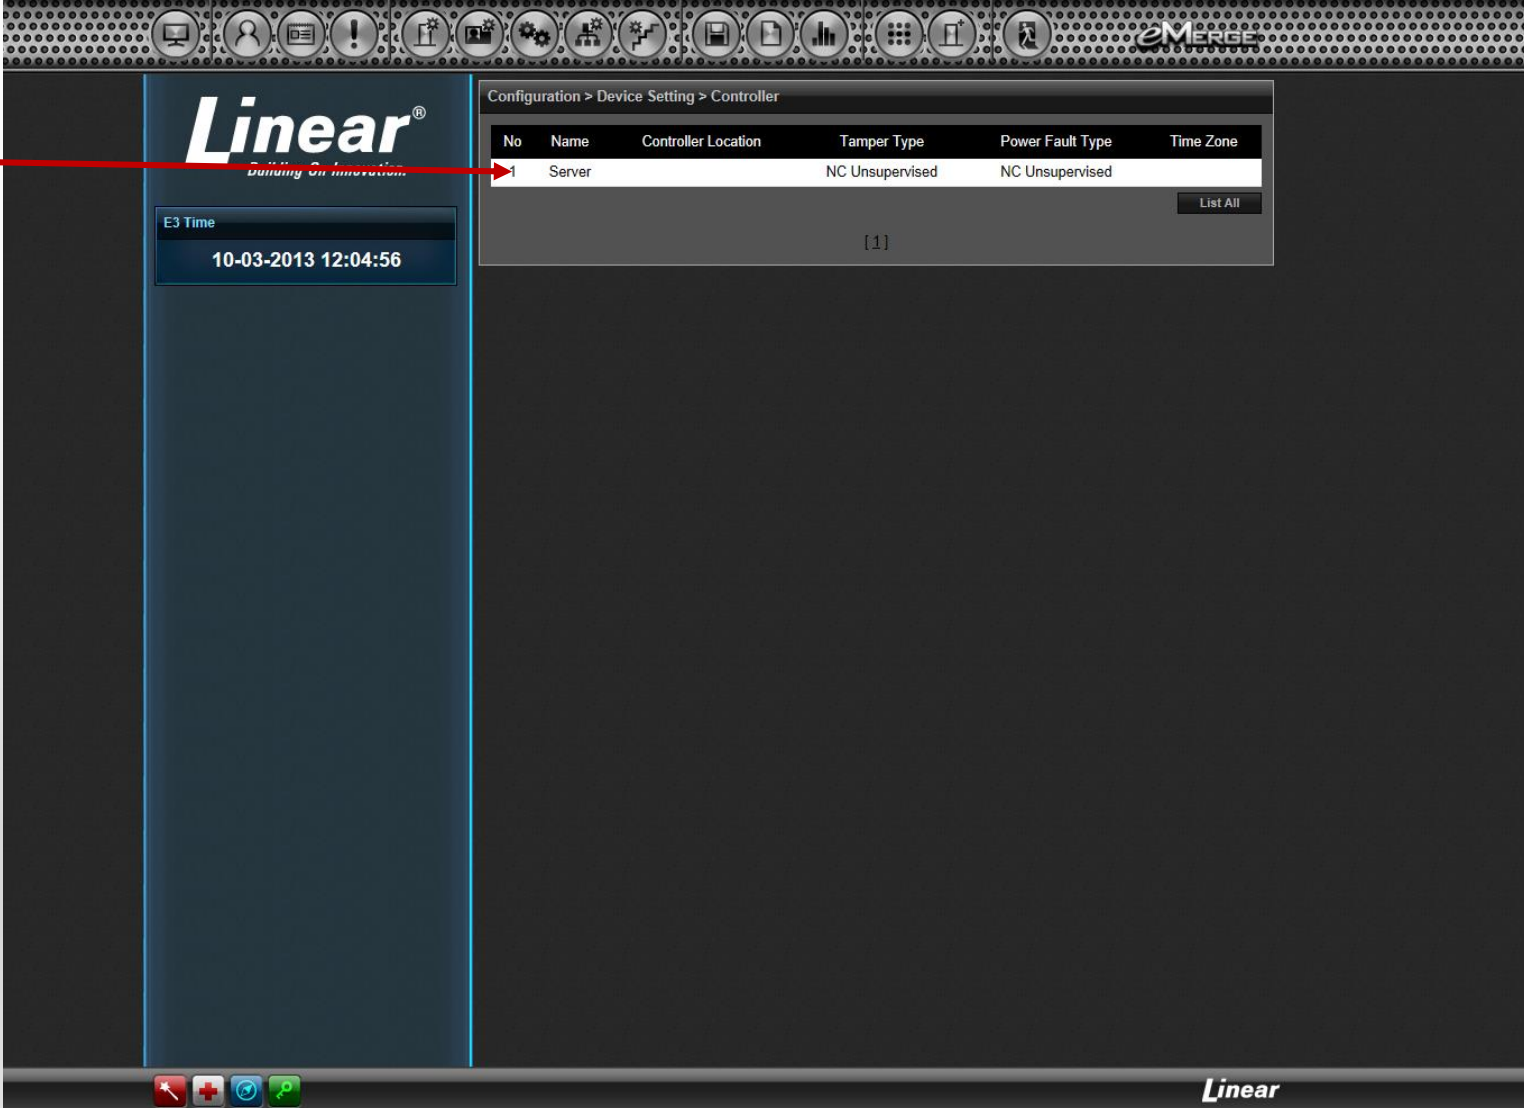

The screenshot displays the Linear eMerge web interface. The top navigation bar includes icons for Home, User, Alerts, Site Map, and various system functions. The breadcrumb trail reads "Configuration > Device Setting > Controller". A table lists the configured controllers:

No	Name	Controller Location	Tamper Type	Power Fault Type	Time Zone
1	Server		NC Unsupervised	NC Unsupervised	

A red arrow points to the first row of the table, which contains the controller named "Server". Below the table is a "List All" button and a page indicator "[1]". The left sidebar shows the "Linear" logo and "Building On Innovation" tagline, along with a clock displaying "E3 Time" and "10-03-2013 12:04:56". The bottom of the interface features a Windows taskbar with icons for Start, Network, and other system utilities.

SETUP WIZARD – CHANGE DEFAULT PAGE

1. In order to change the default page, go to the Site Map and select "Controller."
2. Select the controller.
3. Click "Edit."

The screenshot shows the Linear control panel interface. The top navigation bar includes icons for various functions. The main content area is titled "Configuration > Device Setting > Controller". The left sidebar displays the Linear logo and the current time: "E3 Time 10-03-2013 14:14:56".

The configuration page is divided into several sections:

- Basic:** Name * : Server; Controller Location :
- Tamper Input:** Tamper Type : NC Unsupervised
- Power Fault Input:** Power Fault Type : NC Unsupervised
- Super Administration Account:** ID : admin; Language : English; Default Page : ; Default Floor : Default Floor; Floor Show : No

At the bottom of the configuration form, there are "Edit" and "Cancel" buttons. The "Edit" button is highlighted with a red box, and a red arrow points to it from the instructions on the left. Below the form is a table listing the controller configuration:

No	Name	Controller Location	Tamper Type	Power Fault Type	Time Zone
1	Server		NC Unsupervised	NC Unsupervised	

A "List All" button is located at the bottom right of the table. The page number "[1]" is displayed at the bottom center.

SETUP WIZARD – CHANGE DEFAULT PAGE

1. In order to change the default page, go to the Site Map and select "Controller."
2. Select the controller.
3. Click "Edit."
4. Enter the default user ID and password. Select the desired default page from the dropdown menu and click "Save." Note: Log out and log back in to view your new default page.

Configuration > Device Setting > Controller

Basic

Name * : Server

Controller Location :

Tamper Input

Tamper Input : NC Unsupervised

Power Fault Input

Power Fault Input : NC Unsupervised

Sup. Administration Account

ID * : admin

Password * :

Change Password :

Confirm Password :

Language : English

Default Page : **Dashboard**

Default Floor :

Floor Show :

Reset Cancel

No	Name	Controller Location	Tamper Type	Power Fault Type	Time Zone
1	Server		NC Unsupervised	NC Unsupervised	

List All

[1]